

**Description**

Model G10040 is an 18 volt battery operated, cordless grease gun suitable for 450gm grease cartridges or bulk grease filling. It comes complete with a plastic carry case, a 240v quick battery charger and a spare extra battery. Capable of developing up to 10,000psi, the G10040 can also deliver up to 80 grams of NLGI2 grease per minute. The gun comes complete with a massive 106cm long high pressure flexible extension and hydraulic coupler to grease those difficult to get to places. The G10040 can pump for up to 35 minutes or 4 x 450gm NLGI2 grease cartridges before requiring battery changeover or recharge which takes only 60 minutes. For heavy duty applications where day in day out greasing is required, the 670AN3 manufactured by Alemite USA is also available.

**Specifications**

Uses	18V Battery Operated Cordless Grease Gun - 450gm grease cartridge or bulk grease filling
Discharge Quantity	Up to 80 grams per minute of NLGI2 grease
Grease Pressure	Up to 10,000psi
Battery	1500mAh
Weight	7.9kg
G10044 also available	Suitable for 400gm grease cartridge or bulk grease filling

**Operating instructions**

- 1 Before using the gun for the first time, please ensure the battery has been fully charged.

There are two ways to fill the gun with grease:

*A) 450gm Grease Cartridge:*

Unscrew the grease barrel from the gun and insert the 450gm grease cartridge by holding the barrel assembly & pulling the rod back. Remove both caps from the cartridge, insert the cartridge into the barrel & then rescrew the barrel assembly back onto the gun so that the cartridge sits well against the grease gun head. Once in position, press the clamp down & push the rod back into the barrel.

**Important to note**

When using the gun with a cartridge, the follower cup must be folded **backwards**. The gun is supplied standard with the follower cup in this position.

*B) Bulk Grease Loading:*

Unscrew the grease barrel from the gun & insert the barrel into the bulk grease. Suck the grease up into the barrel by pulling the rod all the way back. When barrel is full with grease, rescrew the barrel assembly back onto the gun so that the grease filter sits well against the grease. Press the clamp down & push the rod back into the barrel.


**Important to note**

When using the gun with bulk grease, the follower cup must be folded forward. To do this you have to take the follower cup and rod assembly out of the barrel, fold the follower cup forward and reassemble the barrel assembly.

- 2 Press the air release valve down until grease appears.
- 3 Pull the gun trigger until grease is forced out of the hydraulic coupler.



# Parts And Drawing Breakdown G10040/G10044

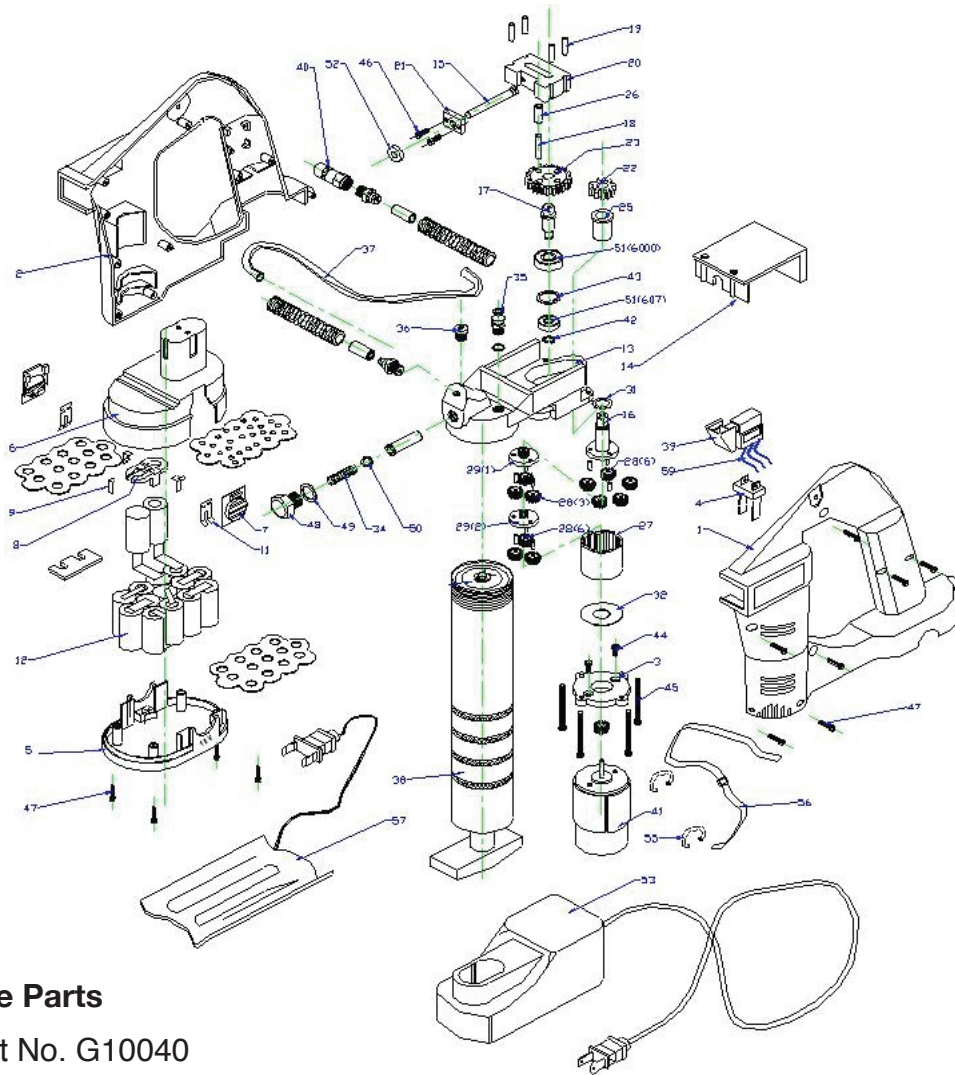

## Ordering Spare Parts

### Parts List – Part No. G10040

Item No.	Part No.	Description	Qty	Item No.	Part No.	Description	Qty
1	G10040-1	Left Cover	1	38	G10040-38	Barrel Assembly 450gm	1
2	G10040-2	Right Cover	1	39	G10040-39	Trigger Switch	1
3,13,14,16-34 42-46,48-51	G10040-PA	Pump Assembly	1	40	G10040-40	Nozzle	1
4	G10040-4	Plug	1	41	G10040-41	Motor	1
5,6	G10040-5-6	Battery Pack Cover	2	47	G10040-47	Screw	1
7-12	G10040-BA	Battery Assembly	2	53	G10040-53	Charger	1
15	G10040-15	Plunger	1	55	G10040-55	Ring	1
35	G10040-35	Vent Valve	1	56	G10040-56	Belt	1
36	G10040-36	Filler Valve	1	57	G10040-57	Electro thermal Blanket	1
37	G10040-37	Hose	1	59	G10040-59	Wire	1

## Trouble Shooting

Problem	Remedy
Gun does not pump	Check that the battery is fully charged and secured correctly.
Gun motor is hot	Stop motor and give motor time to cool down. If the motor is over extended, it will burn out and the manufacturer's warranty will be voided.
Gun does not pump	If the gun is cycling but no grease is appearing from the coupler: 1. Depress the air bleeder several times. If still blocked, unscrew the flexible extension from the gun head, activate gun and wait till grease splatters out. This is the air pocket being released. 2. Unscrew barrel 1-1/2 turns from head to allow air to release and activate gun. 3. Screw the flexible extension & barrel back on firmly and continue operating as normal.

NSW

TEL: (02) 9939 0711

FAX: (02) 9939 0411

QLD/PNG

TEL: (07) 3889 8480

FAX: (07) 3889 8490

VIC/TAS

TEL: (03) 8787 8288

FAX: (03) 8787 8266

WA

TEL: (08) 9209 3066

FAX: (08) 9209 3933

SA/NT

TEL: (08) 8241 7111

FAX: (08) 8241 7011

NZ

TEL: (09) 447 1007

FAX: (09) 447 1008

# Charger Operation G10040/G10044

## Charging the battery pack general

Before using Grease Gun for the first time, the battery pack should be charged for 2 hours. If the battery pack is installed in the gun, remove it by depress the two battery release buttons (one button on each side of battery pack) and pull battery pack out of gun.

As a battery pack approaches the discharged state, you will notice a sharp drop in tool performance. When the tool is unable to perform the task at hand, it is time to recharge the battery pack. Recharging the battery pack before this condition is reached will reduce the total work life of the pack. Discharging the pack beyond this point can damage the pack.

**NOTE:** Battery temperature will increase during and shortly after use. Batteries may not accept a full charge if they are charged immediately after use. Allow the battery pack to cool to room temperature before charging for best results. When the Battery Pack requires re-charging, a 1-hour charge allows the tool to operate at full power. Do not re-charge the Battery Pack longer than 1 hour, as damage to the Battery Pack and/or Charger will occur. Insert the Battery Pack into the Charging Socket of the Charger. Then, plug the Charger into the nearest 240 volt, grounded, electrical outlet.

### CAUTION

Vent slots in top and bottom of charger must not be obstructed. Do not charge battery when temperature is BELOW 32°F (0°C) or ABOVE 104°F (40°C).

### NORMAL CHARGING

Make sure power circuit voltage is the same as that shown on the charger specification plate. Connect charger to power source.

To start charging, press the "Set" button on the charger. The battery is charging when the green light illuminates. Disconnect charger from power source when not in use.

### INSTALLING OR REMOVING BATTERY PACK TO REMOVE BATTERY PACK

Depress the two battery release buttons (one button on each side of battery pack) and pull battery pack out of grease gun.

NSW

TEL: (02) 9939 0711

FAX: (02) 9939 0411

QLD/PNG

TEL: (07) 3889 8480

FAX: (07) 3889 8490

VIC/TAS

TEL: (03) 8787 8288

FAX: (03) 8787 8266

WA

TEL: (08) 9209 3066

FAX: (08) 9209 3933

SA/NT

TEL: (08) 8241 7111

FAX: (08) 8241 7011

NZ

TEL: (09) 447 1007

FAX: (09) 447 1008