

Description

Model G10010N is a trigger action 450g grease gun capable of generating a maximum pressure of up to 4,000psi. It comes standard with a 30cm flexible extension & a 4 jaw coupler for those difficult to get at lubrication points. The G10010N has a 500g capacity when using bulk grease & delivers up to 1.15g of grease per stroke. The G10010N is suitable for most grease up to NLGI2.


Specifications

Uses	450g Grease Cartridges, Suction loading, Bulk loader pump from bulk grease drum.
Capacity	450g or 500g bulk grease
Pressure Capabilities	Maximum: Up to 4,000psi grease pressure
Delivery	1.15g per stroke
Weight	1.5kg


Operating Instructions

How to load a cartridge in your grease gun:

1. Unscrew the head from the barrel
2. Pull back the rod handle and lock into position
 - a. *Push-Lock Style*
Pull the rod handle through the housing and pull into the slotted end cap
 - b. *Stopper Style*
Pull back the rod handle to automatically lock the rod by stopper in the position

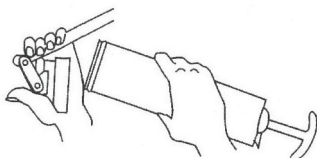


Step 1

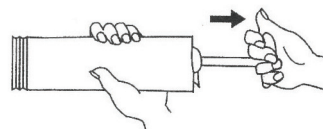


Step 2



3. Remove the plastic cap from the end of grease cartridge, and insert the open end first into the barrel
Loading ways:

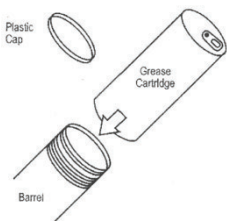

Step 3
A. Cartridge Loading

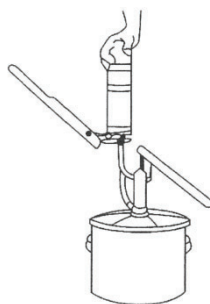


Step 3
B. Dispenser Loading



Step 3
C. Bulk Loading

- Screw head back onto the barrel

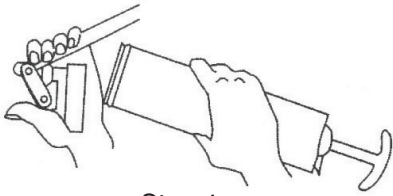

Step 4


- Unlock the rod handle from the end cap
(If the rod handle is hard to release back from the end cap, slightly loosen the gun head 1-3 turns)

- Push-Lock Style*


Release the rod handle from the slotted end cap, and push down the rod handle into the barrel

- Stopper style*

Press the stopper to release rod handle from end cap and at the same time push down the rod handle into the barrel

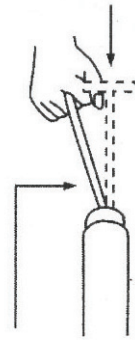


Step 5a

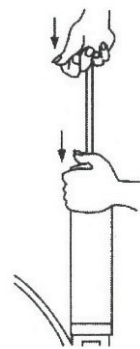


Step 5b

- Unscrew gun head 1-3 turns and pump the lever handle around 6-8 times until grease comes out. This releases air pockets from barrel and makes it easy to pump the grease
- Screw the gun head tightly and ready for priming

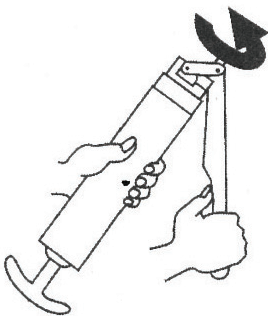

Step 6

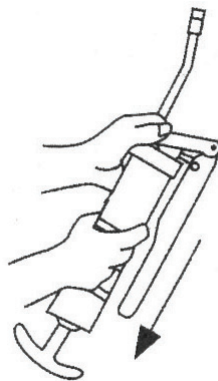

Step 7

Trouble Shooting

Problem: Gun not pumping grease

Possible causes: Air pocket between in the tube and gun head, or between in the gun head and spout

Solution:

- Take off spout from gun head
- Unscrew container tube 1-3 turns from gun head
- Pump the lever handle around 6-8 times until grease comes out
- Screw the gun head tightly and ready for priming

NSW

TEL: (02) 9939 0711

FAX: (02) 9939 0411

QLD/PNG

TEL: (07) 3204 9166

FAX: (07) 3204 1224

VIC/TAS

TEL: (03) 8787 8288

FAX: (03) 8787 8266

WA

TEL: (08) 9209 3066

FAX: (08) 9209 3933

SA/NT

TEL: (08) 8241 7111


FAX: (08) 8241 7011

NZ

TEL: (09) 447 1007

FAX: (09) 447 1008

Parts And Drawing Breakdown G10010N

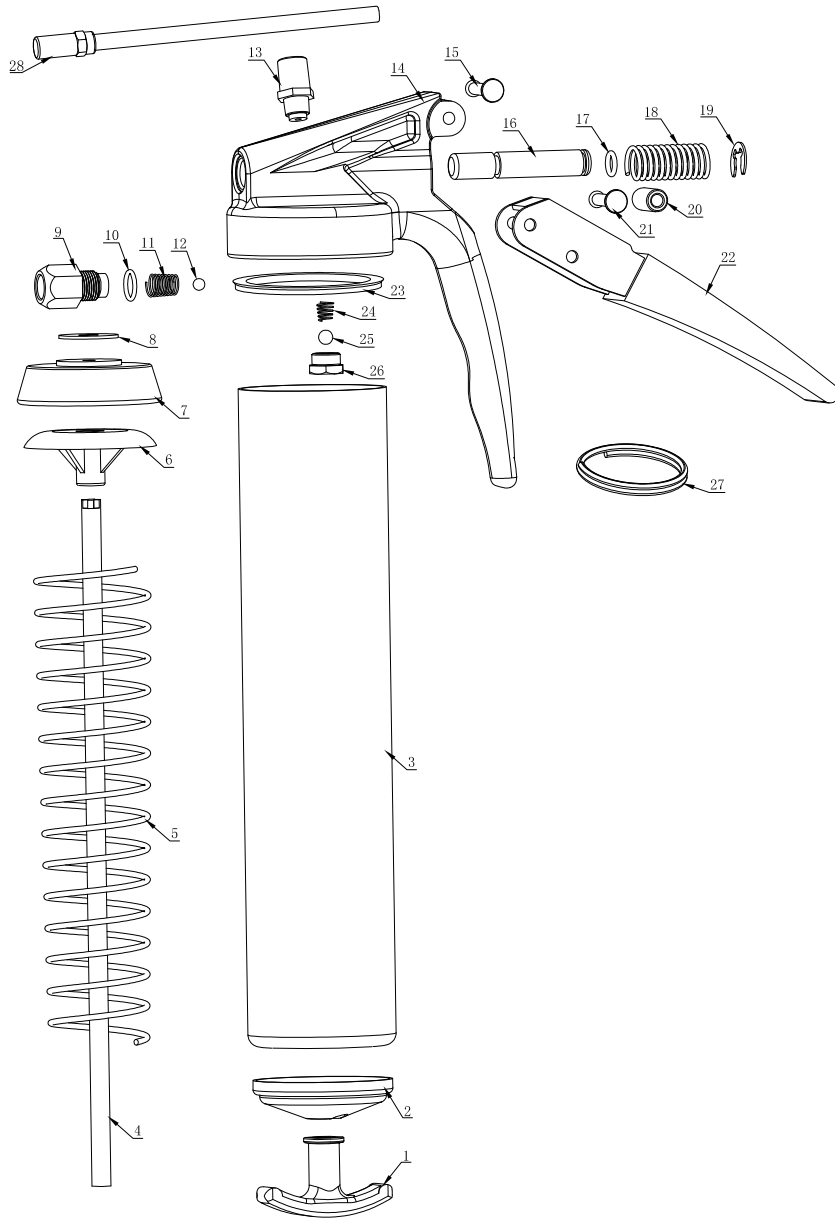

Ordering Spare Parts

Parts List – Part No. G10010N

Item	Description	Qty	Item	Description	Qty
G10010N-1	Follower rod handle	1	G10010N-15	Rivet	1
G10010N-2	Bottom cap	1	G10010N-16	Piston	1
G10010N-3	Tube	1	G10010N-17	O-ring	1
G10010N-4	Follower rod	1	G10010N-18	Spring	1
G10010N-5	Spring	1	G10010N-19	E-ring	1
G10010N-6	A gasket	1	G10010N-20	Bushing bolt	1
G10010N-7	Plunger	1	G10010N-21	Rivet	1
G10010N-8	B gasket	1	G10010N-22	Removable handle	1
G10010N-9	Hexagon head	1	G10010N-23	Rubber ring	1
G10010N-10	O-ring	1	G10010N-24	Spring	1
G10010N-11	Cone spring	1	G10010N-25	Check ball	1
G10010N-12	Check ball	1	G10010N-26	Nut	1
G10010N-13	Filler plug	1	G10010N-27	Ring	1
G10010N-14	Aluminium head	1	G10010N-28	Metallic straight spout	1

NSW

TEL: (02) 9939 0711
FAX: (02) 9939 0411

QLD/PNG

TEL: (07) 3204 9166
FAX: (07) 3204 1224

VIC/TAS

TEL: (03) 8787 8288
FAX: (03) 8787 8266

WA

TEL: (08) 9209 3066
FAX: (08) 9209 3933

SA/NT

TEL: (08) 8241 7111
FAX: (08) 8241 7011

NZ

TEL: (09) 447 1007
FAX: (09) 447 1008